

## REF 6003 Assembly instruction for reed raised garden bed table kit 1500x500 and 1500x750




1º Cut off the pipes according to the measures indicated by the drawing.

2º Join the " T " and the drips. The connection is carried out by pressure. It is useful to put the pipes in the warm water to facilitate the mounting.

3º Attach the pipes to the substratum by means of the pick.

**WARNING:** For the proper function of the system, it is necessary that the pression of the water is of 1.0 or 1,5 bars. It is recommended the use of a pressure regulator. To prevent occlusions by lime, it is recomended to wash the drips with water and vinegar regularly.

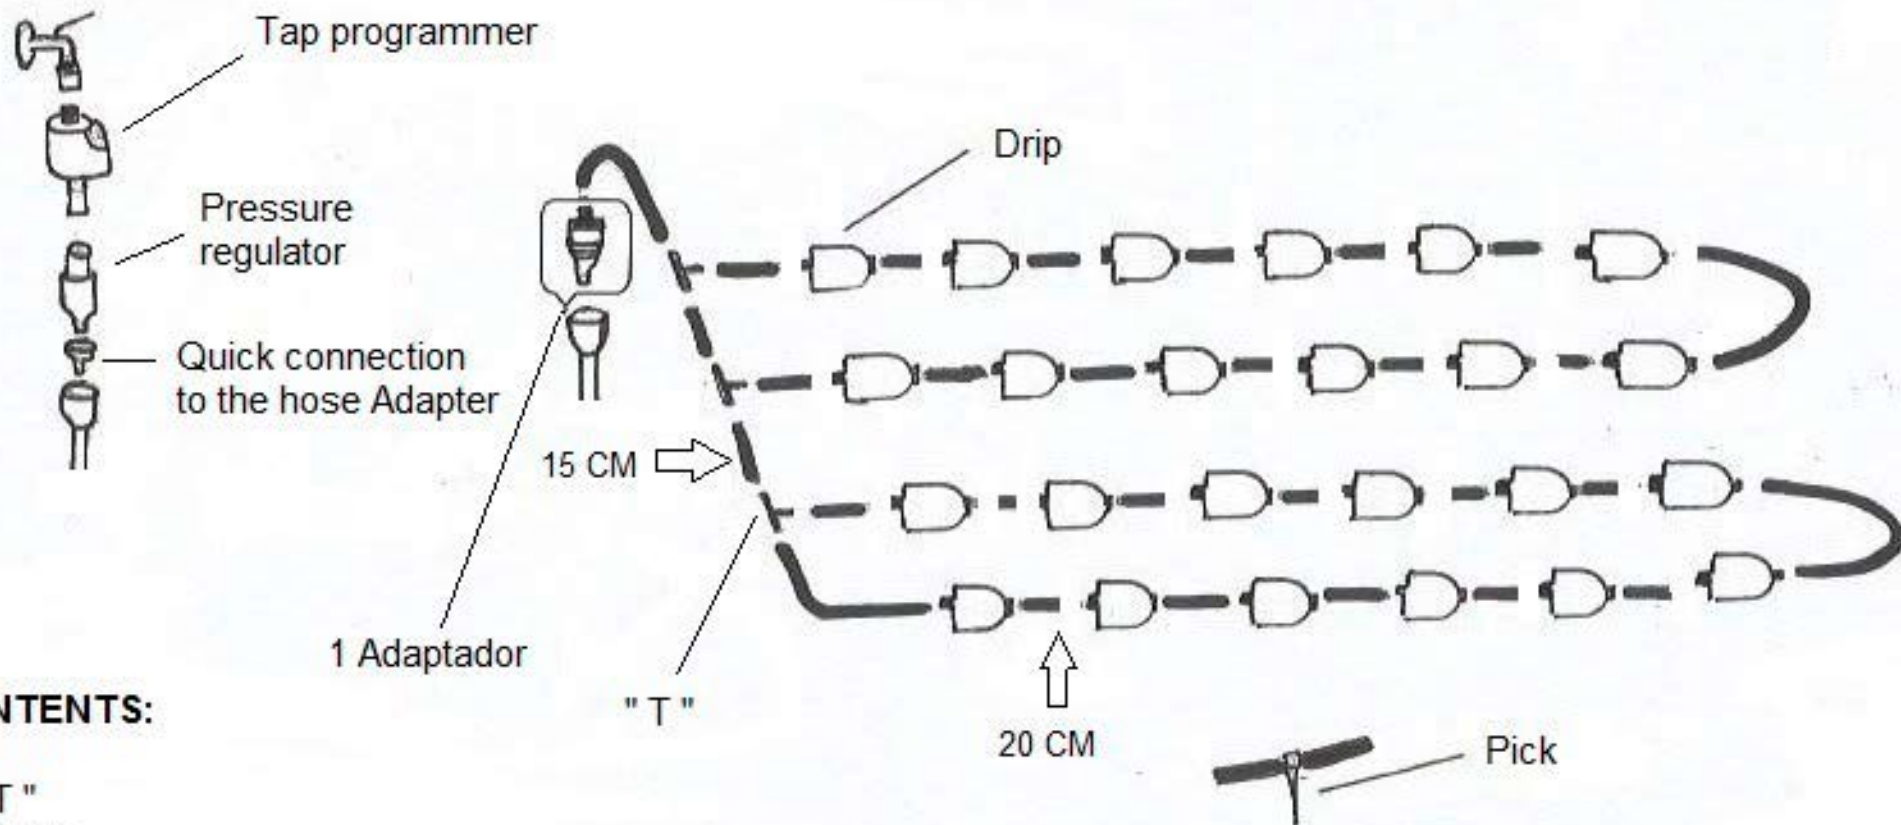

### CONTENTS:

- 4 " T "
- 24 Drips
- 6 metres of pipe
- 1 Adaptador
- 10 Picks

GENERAL OUTLINE OF THE SPRINKLER SYSTEM ASSEMBLY